

User manual

"Night vision keyboard"

Panel mount KSTL105F1xxx-BLEL / Enclosed KSTL105S1xxx-BLEL

Ver. 1.0

• Safety instructions:

- This device must be installed, maintained and connected as described in this user manual.
- Do not dismantle any component of the keyboard. Dismantling may cause electrical shock or may damage the device. The manufacturer will not be held responsible for any type of damage due to dismantling.
- Repair of this device must be undertaken by the manufacturer only.

• Installation:

Keyboard and trackball outputs

USB output protocol

The keyboard and trackball parts are directly plug compatible to a USB port or hub (type A USB connector).

PS2 output protocol

Keyboard part: The keyboard is directly plug compatible to a PS/2 port (6 pin mini-DIN plug)

Trackball part: Directly plug compatible to a PS/2 port (6 pin mini-DIN plug)

** Due to the increasing differences of PS/2 mouse port specifications of the various PC manufacturers, we do recommend that this unit should be tested on the final PC configuration and operating system prior to installing it in series.*

*** Both keyboard and trackball parts need to be connected to ensure a good functioning.*

Drivers

Special device drivers are not supplied. For the trackball and for the keyboard regular drivers which are supplied with most popular menu-driven operating systems can be used.

Please make sure to install the keyboard driver according US-Qwerty, install driver KEYB US.

Note: Eurosign is only supported in up to date operating systems, older systems don't support Euro. When working on Win2000 or XP with a US qwerty keyboard, Euro is supported if US international layout is selected in the controlpanel.

Power supply for backlight

Supply a voltage of +12VDC +/- 5% max 800mA via the DC socket with centerpin(+) of 2,5 mm diameter. This socket is located at the reverse side of the keyboard (for panel mount keyboard) or at the rear side of the enclosure (for enclosed keyboard).

An AC/DC adapter is available as an option. This adaptor is supplied without the power cord which is specific for each country. The power cord can best be purchased in the country of the user.

Backlight adjustment

The keyboard backlight will be activated in a low light environment only, due to the automatic Night/Day sensor.

A dimming system is integrated for the adjustment of the backlight brightness level: press the Dimmer switch



to increase the brightness level of the backlight.

There are eight levels of brightness. Using a low brightness level will increase the usefull life of the EL backlighting.



NSI bvba, Haakstraat 1A, B-3740 Bilzen (Belgium)

Tel: ++32 (0) 89 51 90 00

Fax: ++32 (0) 89 51 90 09

Website: www.nsi-be.com

E-mail: info@nsi-be.com

• Maintenance:

The trackball is primarily used into heavy duty environments. In view of the contamination that may be encountered in these areas, periodic ball cleaning might be necessary. The cleaning procedure does not require any dismantling of the trackball unit.

Procedure:

- 1) For safety reasons, trackball cleaning should only be undertaken by competent personnel when the host system is powered down.
 - 2) A computer keyboard type cleaning agent (alcohol based), should be used. This should be applied to a lint free cloth, not directly to the ball, to avoid flooding the trackball.
 - 3) The ball surface should be gently wiped using the cloth. The ball should be rotated until access has been gained to the entire ball surface.
 - 4) The ball should be allowed to dry before further use.
-

• Internal connections and functions:

For more details on the functions and the pin numbers of the components used, please visit our support page on our website : <http://www.nsi-be.com/support.htm>

• EC Declaration of conformity:

Meets the intent of Directive 89/336/EEC for Electromagnetic Compatibility. Meets the intent of Directive 73/23/EEC for Low Voltage.

Compliance was demonstrated to the following specifications as listed in the official Journal of the European Communities:

Immunity EN 61000-6-2: 2001	Electromagnetic compatibility- Part 6-2: Generic standards - Immunity for industrial environments
EN 61000-4-2: 2001	EMC- Part 4: Testing and measurement techniques- Section 2: Electrostatic discharge immunity test. Basic EMC Publication.
EN 61000-4-3:1997	EMC- Part 4-3: Testing and measurement techniques - Radiated, radio-frequency, electromagnetic field immunity test.
Emission EN 61000-6-4:2001	Electromagnetic compatibility- Part 6-4: Generic standards - Emission standards for industrial environments.
EN 55022:1998+A1:2000	Information technology equipment- Radio disturbance characteristics- Limits and methods of measurement.

• FCC Declaration of conformity:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial or industrial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the use will be required to correct the interference at his own expense.



NSI bvba, Haakstraat 1A, B-3740 Bilzen (Belgium)
 Tel: ++32 (0) 89 51 90 00
 Fax: ++32 (0) 89 51 90 09

Website: www.nsi-be.com
 E-mail: info@nsi-be.com